Instruction

46 tag decode



putting the tag into the coil and identify ,than OK to Collecting window, the cllect antenna close to the car's coil,insert the key and twist,and handy baby collect success,than put the tag into the coil to decode,when decoding successfully,you can put copied tag into coil to copy the data.

46 tag read&write



Identifying the tag and press right button, choose CIP mode and key in password, than you can read, write and copy. PSW mode is only for JMD6.

4D tag read&write



Identifying the tag and press right button to read&write interface, and than you can read, write data if it's unlock, also copy the datas to a copied 4D tag.

4D tag decode



Putting the tag into the coil and identify, than press OK button to decode.

Frequency test



Get into Frequency Test and put your key close to the left button, than press the button of the key.

Generating tag



Putting the tag into the coil and identify, and choose the type you want to generate, don't move the tag until it's successful.